


## **Boat Winterization**

1. Remove all the drain plugs from the following locations:
  - Cylinder Block (one on each side). Remove the knock sensor or open the drain petcock as appropriate. When reinstalling the knock sensor, torque to 15 lb ft. or close the drain petcock finger tight only.
  - Exhaust Manifolds - remove hoses and/or drain plugs, one on each side.
  - Transmission Cooler - one drain plug.
2. Remove the hose from the inlet side of the seawater pump.
3. Remove the large hose from the engine circulating pump, or drain plug (if equipped). See illustration below.

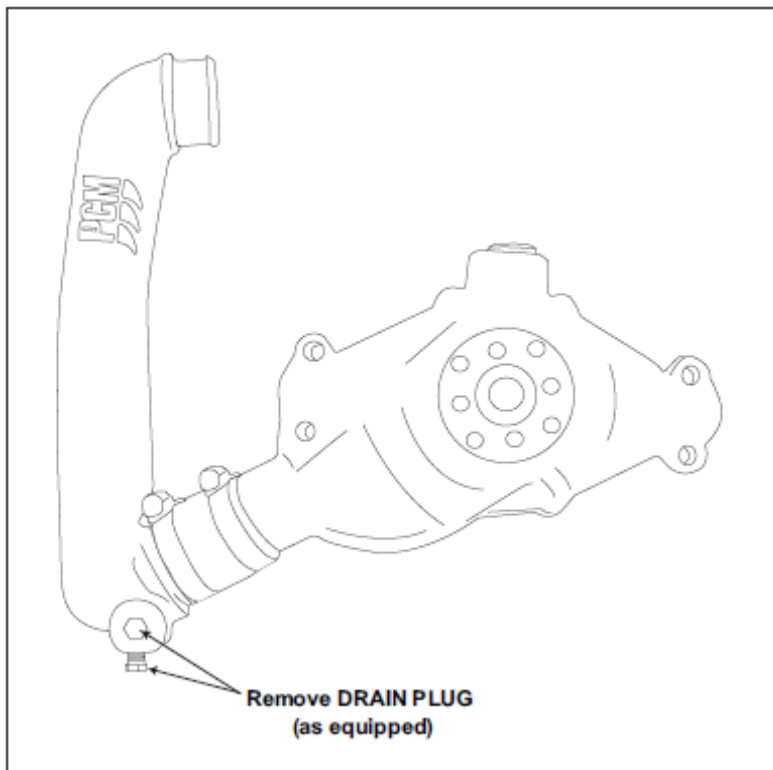

4. If the boat is equipped with a heater, remove the upper heater hose (or brass fitting plug) and blow the water out of the heater core. The water will drain from the location in the illustration above.
5. Drain the raw water strainer.
6. Reinstall plugs, hoses, and electrical connections.